

INSTALLING THE DELL 790 IN THE CABINET OF AN OLDER E-MAX ELITE™ BINGO MACHINE

Date Released: 2011-12-01



Issue: When replacing a Dell 270, 280, 745, 760, or 780 computer with a Dell 790, the audience-side door will not close properly. During installation, it is necessary to shift the Dell 790's position to the right (looking at the computer from the back). This is accomplished by removing the old protective foam from along the sides and bottom of the cabinet and replacing it with the foam provided with the Dell 790

1) The original position of the foam [This is only informational/for reference - the original foam will be removed! See step 2]

The following pieces of foam were included in E-max Elite Electronics cabinets prior to the release of the Dell 790

- 4 * HH421 - Foam, computer, sides
- 2 * HH419 - Foam, computer, block
- 1 * HH420 - Foam, computer, bottom

The original arrangement of the foam (actual cabinet)

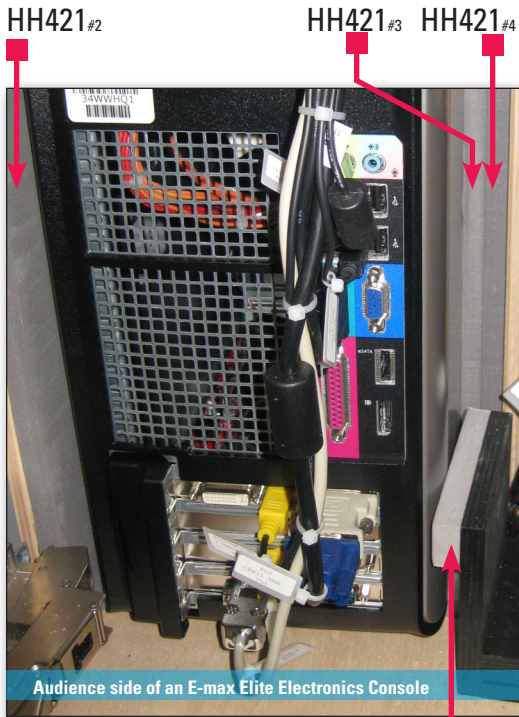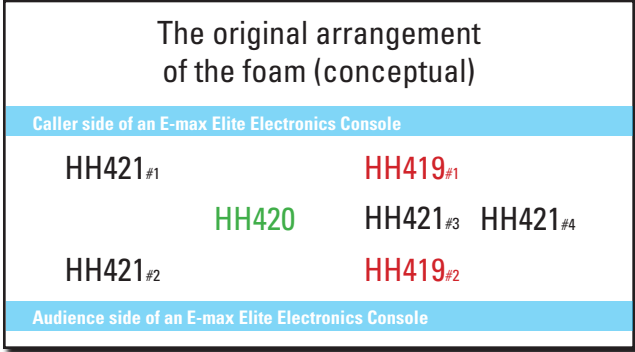

The following are not visible in the picture above

- HH421 #1
- HH420
- HH419 #1



The following are not visible in the picture above

- HH421 #1, #2
- HH420
- HH419 #2



The following are not visible in the picture above

- HH421 #2, #3, #4
- HH420
- HH419 #2

2) Remove the original computer and foam

The foam is glued to the cabinet: it needs to be gently removed



3) The replacement foam that comes with the Dell 790

1 * HH420
Foam, computer, bottom

3.5 feet of HH404
Foam, Polyethylene 1" x 1/4"
cut in pieces of 17" 17" 4" 4"




5 * HH421
Foam, computer, sides

4) Install according to the layouts below: peel off the adhesive tape from each piece of foam and attach the foam to the wood cabinet

Using the adhesive of HH420 is optional (HH420 is not pictured in the images below)
For the sake of clarity and emphasis, the images below only contain the foam and cabinet; however, when replacing a computer with a Dell 790, it is not necessary to remove anything other than the items mentioned in step #2

The new arrangement of the foam (actual cabinet)

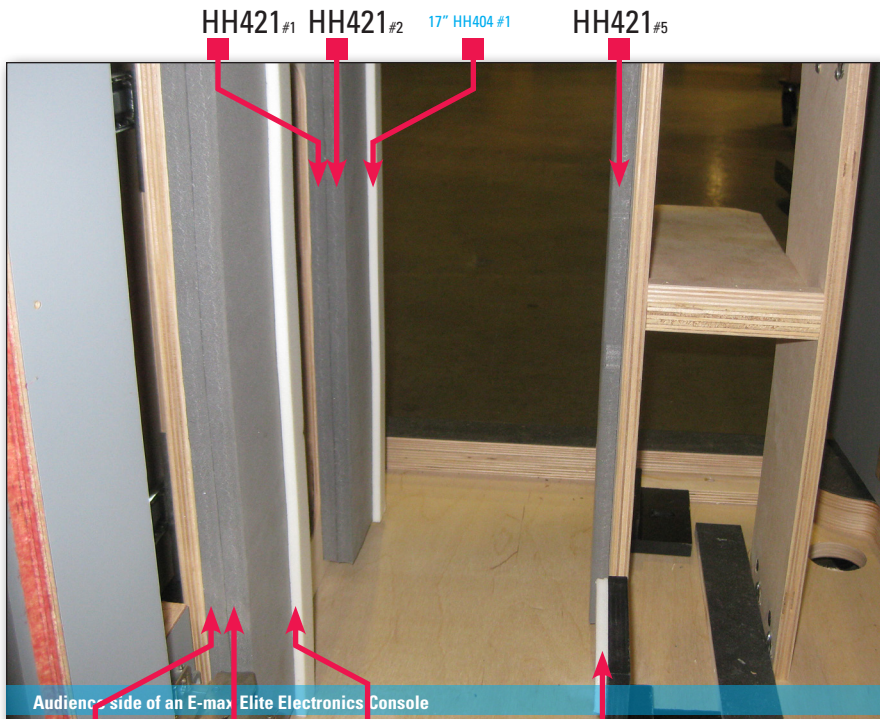

HH421 #3 HH421 #4 17" HH404 #2

4" HH404 #2

The following are not visible in the picture above

- HH420
- 4" HH404 #1

The new arrangement of the foam (conceptual)

Caller side of an E-max Elite Electronics Console



Audience side of an E-max Elite Electronics Console

4" HH404 #1 HH421 #5 4" HH404 #2 HH421 #2 HH421 #1




The following are not visible in the picture above

- HH420
- HH421 #3, #4
- 17" HH404 #2

5) Insert the Dell 790 and connect it according to the diagram on the next page

DELL OPTIPLEX GX790 CONNECTIONS

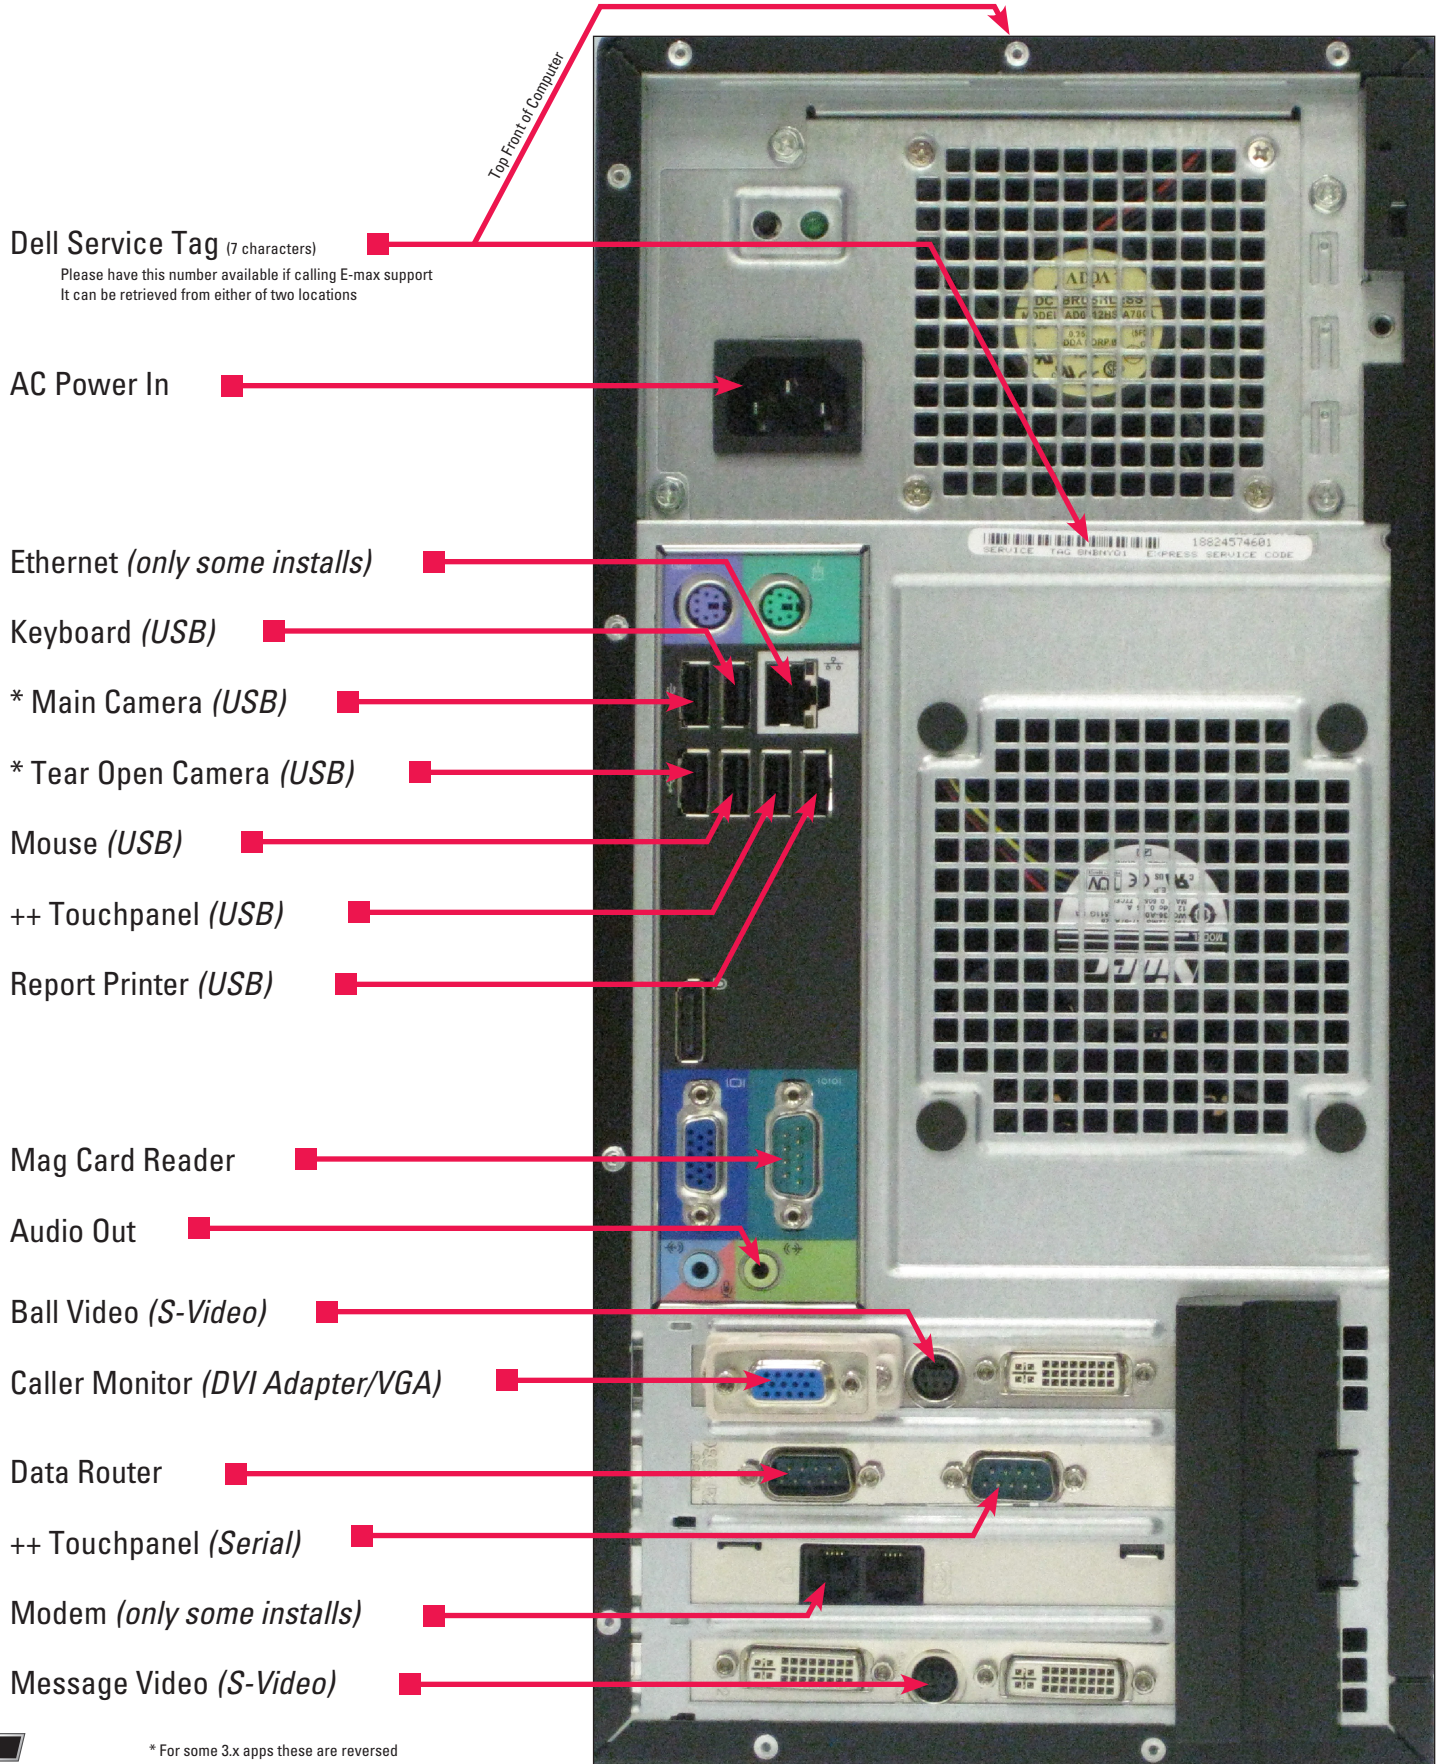

* For some 3.x apps these are reversed
++ Only one will be present



Do not power on the system until every connection is plugged in

Please contact the Technical Assistance Center for any further technical questions about our products

1-800-277-6214

TAC@ARROWINTERNATIONAL.COM

If you have any comments, or suggestions, specifically related to this document you can contact the Technical Writing Team directly at

TWT@ARROWINTERNATIONAL.COM