



## Play Bingo in 3 easy steps

1

Insert an initialized OneKey™ module to activate the Bingo machine. (Bingo Hall personnel will do this at the point of sale.)



OneKey™


2

Press **ENTER** to begin playing Bingo.



3

Press called number, then press **ENTER**.

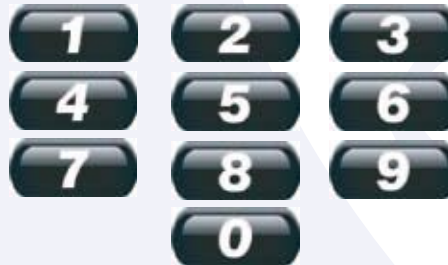

### Button Functions



Press the **INFO** button during a game to display more information about the cards.



Press the **BINGO BOARD** button during game to show all numbers entered.



Press the number, then the **WILD** button and the **ENTER** button to enter wild numbers.



Press the **CLEAR** button to clear any incorrect numbers before they have been entered.



Enter the number then press the **DELETE** button to delete an incorrectly entered number.



Press the **VIEW CARDS** button to rotate through all cards being played.



Press the **NEXT GAME** button for two seconds to start the next game after the current game is over.

